

**BROADCAST<sup>®</sup>**  
**tiny TOOLS<sup>™</sup>** INC.  
**PROBLEM SOLVED**

## ***Installation and Operation Manual***



### **Telco Sentinel** ***Bi-directional USB DTMF/ASCII transceiver with built-in hybrid***

Manual update: 07/23/2013

Firmware Version 1.07 and above. If you need a firmware upgrade, contact Broadcast Tools<sup>®</sup>

No part of this document may be reproduced or distributed without permission.  
ALL SPECIFICATIONS AND FEATURES FOR THIS PRODUCT ARE SUBJECT TO  
CHANGE WITHOUT NOTICE

**NOTE: We recommend the use of Chrome, Firefox or Safari as your browser.**

Due to the dynamic nature of product design, the information contained in this document is subject to change without notice. Broadcast Tools, Inc., assumes no responsibility for errors and/or omissions contained in this document. Revisions of this information or new editions may be issued to incorporate such changes.

*Broadcast Tools<sup>®</sup> is a registered trademark of Broadcast Tools, Inc.  
tiny TOOLS<sup>™</sup> is a trademark of Broadcast Tools, Inc.  
All Sentinel<sup>®</sup> labeled products are registered trademarks of Broadcast Tools, Inc.  
Copyright<sup>®</sup> 1989 - 2013 by Broadcast Tools, Inc. All rights reserved.  
No part of this document may be reproduced or distributed without permission.*

Visit [www.broadcasttools.com](http://www.broadcasttools.com) for important product update information.

## Table of Contents

Section Title	Page #
Introduction . . . . .	3
Safety Information . . . . .	3
Who to Contact for Help . . . . .	3
Product Overview . . . . .	4
Features/Benefits . . . . .	4
Inspection . . . . .	5
Installation . . . . .	5
Surge Protection . . . . .	5
LED indicators . . . . .	5
USB Port . . . . .	5
Telephone Jack . . . . .	5
Caller/Send Audio . . . . .	5
Jumper Settings . . . . .	6
USB Serial Setup . . . . .	6
Information Retrieval Commands . . . . .	6
Control Commands . . . . .	7
Caller ID Data . . . . .	7
Operation . . . . .	7
Specifications . . . . .	8
Warranty . . . . .	9
Product label . . . . .	Appendix
Connector, DIP-switch, and LED layout . . . . .	Appendix
Fractional schematic . . . . .	Appendix

### WEBSITE:

*Visit our web site for product updates and additional information.*



### CONTENTS

## **INTRODUCTION**

Thank you for your purchase of a BROADCAST TOOLS® TELCO SENTINEL, bi-directional USB DTMF/ASCII transceiver with built-in hybrid (referred to as the TELCO SENTINEL throughout this manual). We're confident that this product will give you many years of dependable service. This manual is intended to give you all the information needed to install and operate the BROADCAST TOOLS® TELCO SENTINEL.

## **SAFETY INFORMATION**

Only qualified technical personnel should install the TELCO SENTINEL. Any attempt to install this device by a person who is not technically qualified could result in a hazardous condition to the installer or other personnel or damage to the TELCO SENTINEL or other equipment. Please ensure that proper safety precautions have been taken before installing this device. If you are unfamiliar with this type of equipment, please contact a properly qualified engineer to handle the installation and setup of the TELCO SENTINEL. Broadcast Tools, Inc., is unable to support NON-Broadcast Tools software, hardware or NON-Broadcast Tools computer/hardware/software problems. If you experience these problems, please research your hardware/software instruction manuals or contact the manufacturers technical support department.

## **WHO TO CONTACT FOR HELP**

If you have any questions regarding your product or you need assistance, please contact your distributor from whom you purchased this equipment.

If you would like more information about Broadcast Tools® products, you may reach us at:

### **Broadcast Tools, Inc.**

131 State Street

Sedro-Woolley, WA 98284-1503 USA

Voice: 360.854.9559

Fax: 866.783.1742

Internet Home Page: [www.broadcasttools.com](http://www.broadcasttools.com)

E-mail: [support@broadcasttools.com](mailto:support@broadcasttools.com)

***THANK YOU FOR CHOOSING  
BROADCAST TOOLS® BRAND PRODUCTS!***



Designed and Assembled  
in the USA

## Product Overview

The Telco Sentinel is a bi-directional DTMF/ASCII transceiver. It converts DTMF tones to ASCII and ASCII to DTMF tones when connected to a telephone line and provides incoming caller ID data. The unit is also equipped with an electronic hybrid providing send and caller audio on 3.5mm jacks, along with removable screw terminals. The Telco Sentinel interfaces with the PC via a USB Com port. Tones are transmitted at a selectable speed of 50ms, 100ms or 500ms tone/space. A post-transmit delay of 0.0 to 9.9 seconds can be added that will cause a delayed transmission of tones after the string is received on the USB port. The DTMF transmit buffer is 256 characters long. The Telco Sentinel can be configured to automatically answer after between 1 and 9 rings, or auto-answer may be disabled. Front panel send and caller telephone line audio trimmers are supplied, along with front panel LED's display; power, ring, hook and tone. The Telco Sentinel is USB bus powered.

## Features/Benefits

- Bi-directional DTMF/ASCII transceiver
- Decodes caller ID data.
- Built-in electronic hybrid for caller/send audio.
- USB COM port interface for connection to PC.
- LED indicators for power, ring, hook, and tone detection.
- Fully RFI proofed.
- USB bus powered.
- Up to four Telco Sentinels may be rack mounted on one RA-1, 1-RU rack shelf.

## WEBSITE:

*Visit our web site for product updates and additional information.*



## Inspection

Please examine your TELCO SENTINEL carefully for any damage that may have been sustained during shipping. If any damage is present, please notify the shipper immediately and retain the packaging for inspection by the shipper. The package should contain the TELCO SENTINEL, a USB type A/B cable and a RJ11 phone cable. Manuals may be downloaded from our web site.

## Installation

### Surge Protection

The TELCO SENTINEL has built-in resistance to voltage changes; we recommend that you use a power surge protector or line conditioner on the incoming lines. Lightning strikes and/or other high voltage surges may damage your TELCO SENTINEL and connected equipment if it is not properly protected. For lightning protection devices, check out [www.polyphaser.com](http://www.polyphaser.com) and [www.itwlinx.com](http://www.itwlinx.com).

### LED indicators

- “PWR” LED: Indicates that the Telco Sentinel is powered up (green.)
- “HOOK” LED: Lit when line is seized (off hook) (yellow.)
- “RING” LED: Lit when ringing is detected on line (red.)
- “TONE” LED: Indicates valid DTMF tone decode (red.)

### USB Port

This type B USB port powers the Telco Sentinel and is used to interface the Telco Sentinel to the computer via a virtual COM port. See the “USB Serial Setup” section of this manual for more information.

### Telephone (Telco) Jack

RJ11 jack for connection to a phone line.

### Caller/Send Audio

The Telco Sentinel’s built-in electronic hybrid allows for audio to be recorded/monitored from the phone line (caller audio) as well as for audio to be sent to the phone line (send audio) by external audio interfaces.

### Caller Level/Send Level

The front panel “Caller Level” and “Send Level” adjustment trimmers may be used to adjust the caller output audio and send input audio levels to the desired loudness.

### Unbalanced Caller/Send Audio (3.5mm jacks)

Unbalanced audio connections can be made via the Caller and Send 3.5mm TRS jack connections. The TRS jacks are configured for dual mono output/input which means that mono audio is carried on the tip well as the ring and ground is provided on the sleeve of each connection.

### Balanced Caller/Send Audio (Terminal Block)

Balanced audio connections can be made via the 5-position pluggable euro-style terminal block labeled “Audio.” See below for a connector pin-out.

SEND	SEND	GND	CALLER	CALLER
–	+		–	+

**NOTE:** All connections and indicators are noted on the top cover label.



## Jumper Settings

JP3: DTMF Tone detection jumper (Guard time)

The Telco Sentinel is equipped with a 4-position jumper, labeled “JP3” on its PCB. This is used to adjust how quickly DTMF tones are detected. The settings are as follows:

F = Fast, 50ms ON / 50ms OFF

M = Medium, 100ms ON / 100ms OFF

S = Slow, 150ms ON / 150ms OFF

To detect multi-tone bursts, the jumper should be left in the default position F = Fast.

## USB Serial Operation

To control the Telco Sentinel, you must connect it to the USB port of a PC running a serial terminal program such as HyperTerminal, or PuTTY. When you first plug the Telco Sentinel into your PC it should automatically install the correct FTDI USB Serial “Virtual COM port” drivers which will allow you to access the Telco Sentinel on a COM port. Set the terminal program to 9600,8,N,1, flow control to NONE. Character Echo should also be turned ON.

**NOTE:** If the Telco Sentinel’s FTDI USB Serial “Virtual COM port” drivers do not automatically install they may be downloaded here: <http://www.ftdichip.com/Drivers/VCP.htm>

## Information Retrieval/Setup Commands

The (@) ampersat/at sign symbol is the beginning of string followed by the command/parameters. No carriage return or line feed is required. Commands are NOT case sensitive.

**@Pnn** – Sets the wait time between the receipt of an ASCII string and the generation of DTMF tones. When <nn> is the number of 100ms units that it will wait after receiving an ASCII string before sending DTMF. This is actually nn+100ms as there is an initial 100ms wait when receiving ASCII before any processing is done. This number can be 00-99.

**Command example:** @P01 will set the DTMF generation delay to 200ms

**Response example:** P=01<cr><lf>

**@P?** – Returns the current stored DTMF generation delay value: P=<nn>

**Response example:** P=01<cr><lf>

**@Rn** – Sets the number of rings before auto-answer. Where <n> is a number 0-9, 1-9 is the number of rings and 0 will disable auto-answer.

**Command example:** @R1 will set auto-answer to one ring.

**Response example:** R=1<cr><lf>

**@R?** – Returns the current ring value.

**Response example:** R=1<cr><lf>

**@Sn** – Sets the tone duration and tone spacing for generated DTMF tones.

Three spacing settings (<n>) are available 1, 2, or 3:

1=50ms tones with 50ms spacing.

2=100ms tones with 100ms spacing.

3=500ms tones with 500ms spacing.

**Command example:** @S1 will set tone duration and spacing to 50ms.

**Response example:** S=1<cr><lf>

**@S?** – Return the current tone duration and tone spacing value.

**Response example:** S=1<cr><lf>

**@U** – Return unit model and firmware version :<product name> <version><cr><lf>

**Response Example:** BTI TELCO SENTINEL v1.06<cr><lf>

## WEBSITE:

*Visit our web site for product updates and additional information.*



## INSTALLATION

### **Control Commands**

**@T** – Takes phone line off-hook with loop current check. Will return @T when off hook and @H when the hang-up occurs.

**Response example (off-hook):** @T

**Response example (hang-up):** @H

**@H** – Will hang-up the phone line and return a @H.

**Response example:** @H

**@I** – Takes phone line off-hook without loop current check. It will return a @I on the serial port when off-hook. This is useful for interfacing dry lines or for non-phone applications.

**Response example:** @I

### **Caller ID data**

The Telco Sentinel will output raw caller ID data to the USB Com port when it is present with an incoming call. All caller ID data is prefaced with the string: @CID followed by the raw Caller ID data.

**NOTE:** At least two rings must occur before pick-up for caller ID data to be transmitted and received.

### **Operation**

When the appropriate number of rings are detected by the Telco Sentinel it will go off-hook and return @T.

To generate DTMF tones from a character string simply send the data string to the Telco Sentinel's USB Com port at 9600,8,N,1,None. Up to 256 characters can be accepted in one string. 50ms after the last character of the string is received the Telco Sentinel will begin generating DTMF tones from the ASCII string. No carriage return is needed to terminate DTMF tone generation commands, only the above mentioned 50ms pause.

For example to have a DTMF tone burst of 12345 sent, you would send the ASCII characters 12345 in one packet and 50ms after the 5 is received it will begin generating the DTMF tone burst.

The comma “,” can be used to generate a one second pause within a tone burst and the semi-colon “;” can be used to generate a 100ms pause within a tone burst.

For example the ASCII string: 9,,15416872118 will dial 9, wait 2 seconds then dial 541 687 2118.

Any DTMF tones received on the phone line will automatically be decoded and immediately output over the USB Com port.

## SPECIFICATIONS

Audio Inputs (Send):	Unbalanced 3.5mm jack, left and right mono. 11k impedance. Balanced mono terminal block input. 22k impedance.
Audio Outputs (Caller):	Unbalanced 3.5mm jack, left and right mono. 47 impedance Balanced mono terminal block output. 100 impedance.
USB Serial Port	USB Type B jack. FTDI Virtual Com Port chipset, 9600 baud, 8 data bits, no parity, 1 stop bit. Handshaking disabled.
Logic	Flash Microprocessor w/non-volatile memory
Power	USB bus powered.
Power Indicator	Green LED
Mechanical	6.10" x 3.75" x 1.60" (DWH)
Weight	1.5 pounds
Options	RA-1, 1-RU rack shelf. Up to four units may be accommodated.

## WEBSITE:

*Visit our web site for  
product updates and  
additional information.*





## **LIMITED WARRANTY**

The term “Buyer” as used in this document refers to and includes both (but only) (a) any person or entity who acquires such an item for the purpose of resale to others (i.e., a dealer or distributor of an item), and (b) the first person or entity who acquires such an item for such person’s or entity’s own use.

Broadcast Tools warrants to each Buyer of any item manufactured by Broadcast Tools that the item will be free from defects in materials and workmanship at the time it is shipped by Broadcast Tools if the item is properly installed, used and maintained.

## **EXCLUSIVE REMEDIES**

If Broadcast Tools is notified, in writing, of a failure of any item manufactured by Broadcast Tools to conform to the foregoing Limited Warranty within one (1) year following the date of the Buyer’s acquisition of the item, and if the item is returned to Broadcast Tools in accordance with Broadcast Tools’ instructions for confirmation by inspection of the defect (which at Broadcast Tools’ election may include, without limitation, a requirement that the Buyer first obtain a Return Authorization number from Broadcast Tools, that the Buyer furnish proof of purchase in the form of an invoice and/or receipt, and that the Buyer prepay all freight charges associated with any return of the item to Broadcast Tools using such freight service as Broadcast Tools reasonably may specify), Broadcast Tools will repair or replace the defective item, or will refund the purchase price paid by the Buyer for the item. Broadcast Tools shall have the exclusive right to choose between these alternative remedies.

## **NO OTHER WARRANTIES OR REMEDIES**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, BROADCAST TOOLS AND ITS SUPPLIERS DISCLAIM ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; AND THE FOREGOING ALTERNATIVE REMEDIES SHALL BE EXCLUSIVE OF ALL OTHER REMEDIES. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE/JURISDICTION TO STATE/JURISDICTION.


## **NO LIABILITY FOR CONSEQUENTIAL DAMAGES**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NEITHER BROADCAST TOOLS NOR ANY OF ITS SUPPLIERS SHALL HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, INDIRECT, CONSEQUENTIAL OR PUNITIVE DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ANY DAMAGES FOR LOST PROFITS, BUSINESS INTERRUPTION, LOSS OF DATA OR INFORMATION, COST OF CAPITAL, CLAIMS OF CUSTOMERS, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR THE INABILITY TO USE ANY ITEM SUPPLIED BY BROADCAST TOOLS, EVEN IF BROADCAST TOOLS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES HAVE ANY LIABILITY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES. THIS LIMITATION OF LIABILITY APPLIES WHETHER A CLAIM IS ONE ALLEGING BREACH OF A CONTRACT OR WARRANTY, NEGLIGENCE OR OTHER TORT, FOR THE VIOLATION OF ANY STATUTORY DUTY, THE FAILURE OF ANY LIMITED OR EXCLUSIVE REMEDY TO ACHIEVE ITS ESSENTIAL PURPOSE, OR ANY OTHER CLAIM OF ANY NATURE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, THIS LIMITATION MAY NOT APPLY TO YOU.


### **Broadcast Tools, Inc.**

131 State Street  
Sedro-Woolley, WA 98284 • USA

360.854.9559 **voice** • 866.783.1742 **fax**  
support@broadcasttools.com **e-mail**  
www.broadcasttools.com **website**

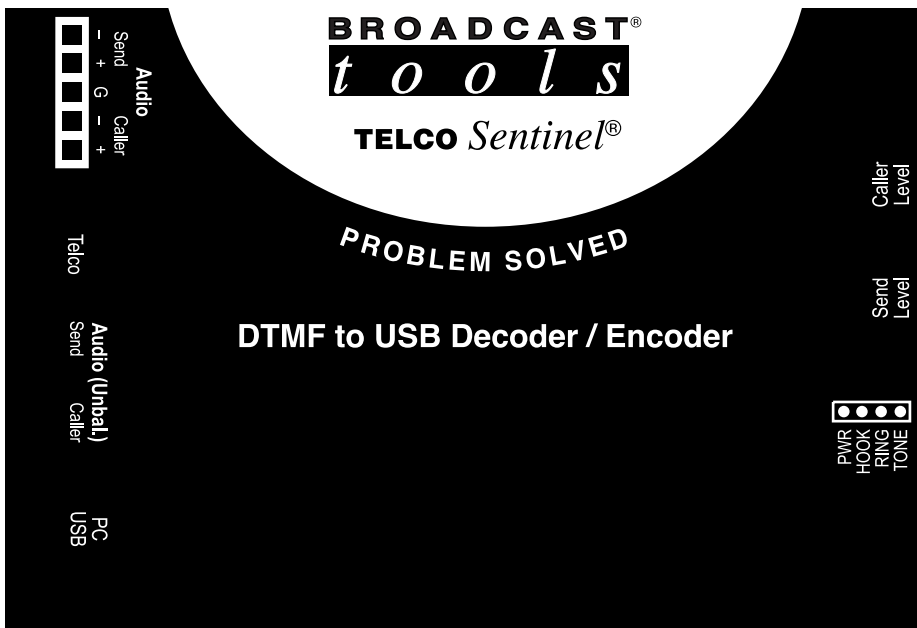

# Broadcast Tools® Telco Sentinel® Jumper and Connection Layout

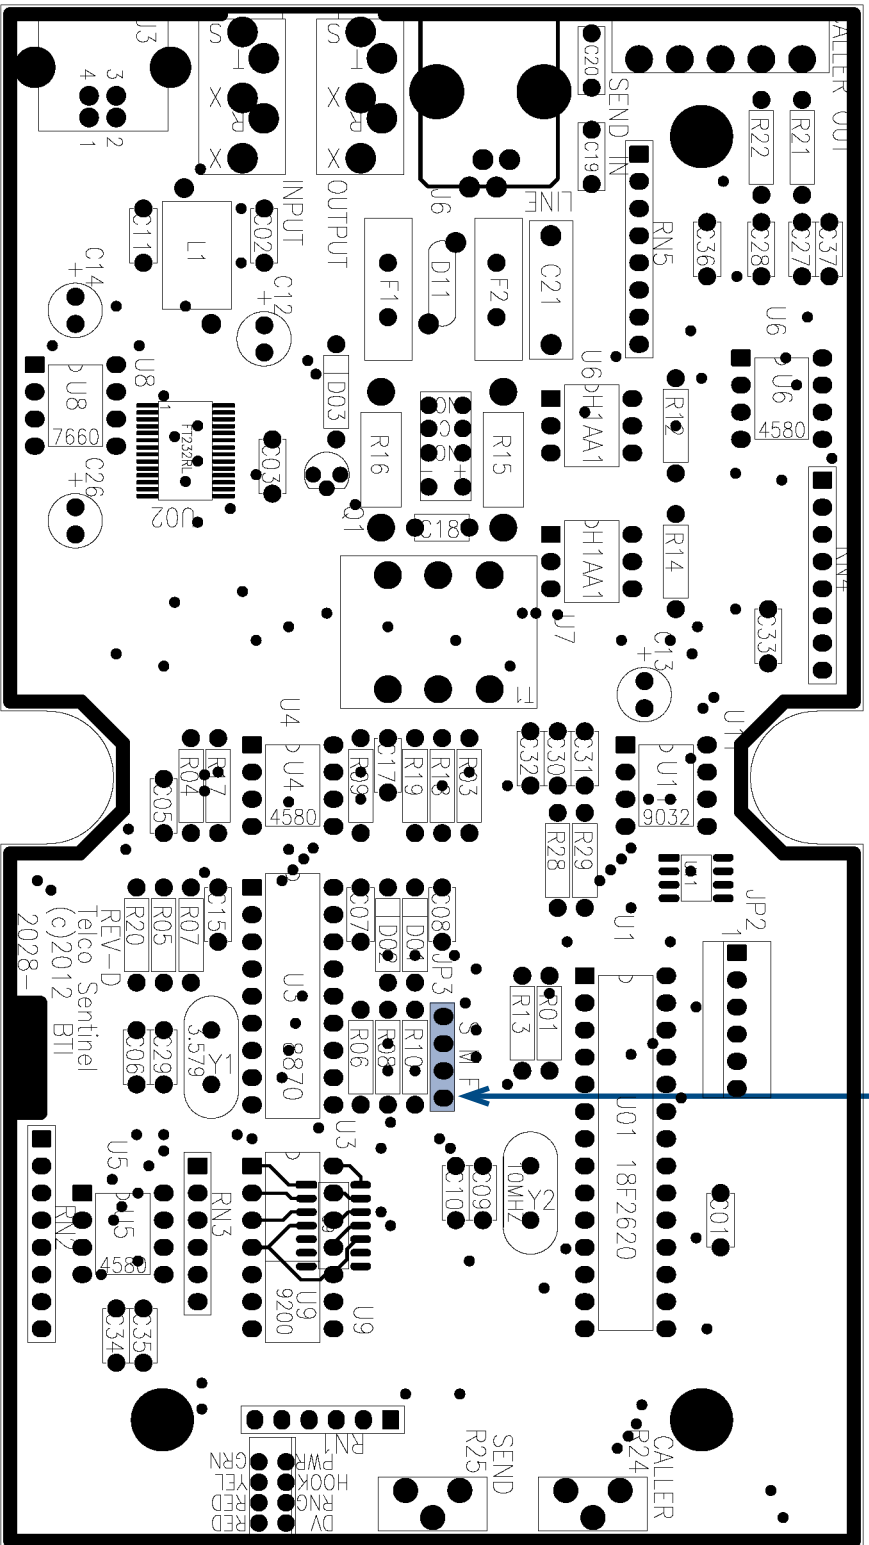

Detection Jumper


APPENDIX

11

### Fractional Schematic

APPENDIX

12

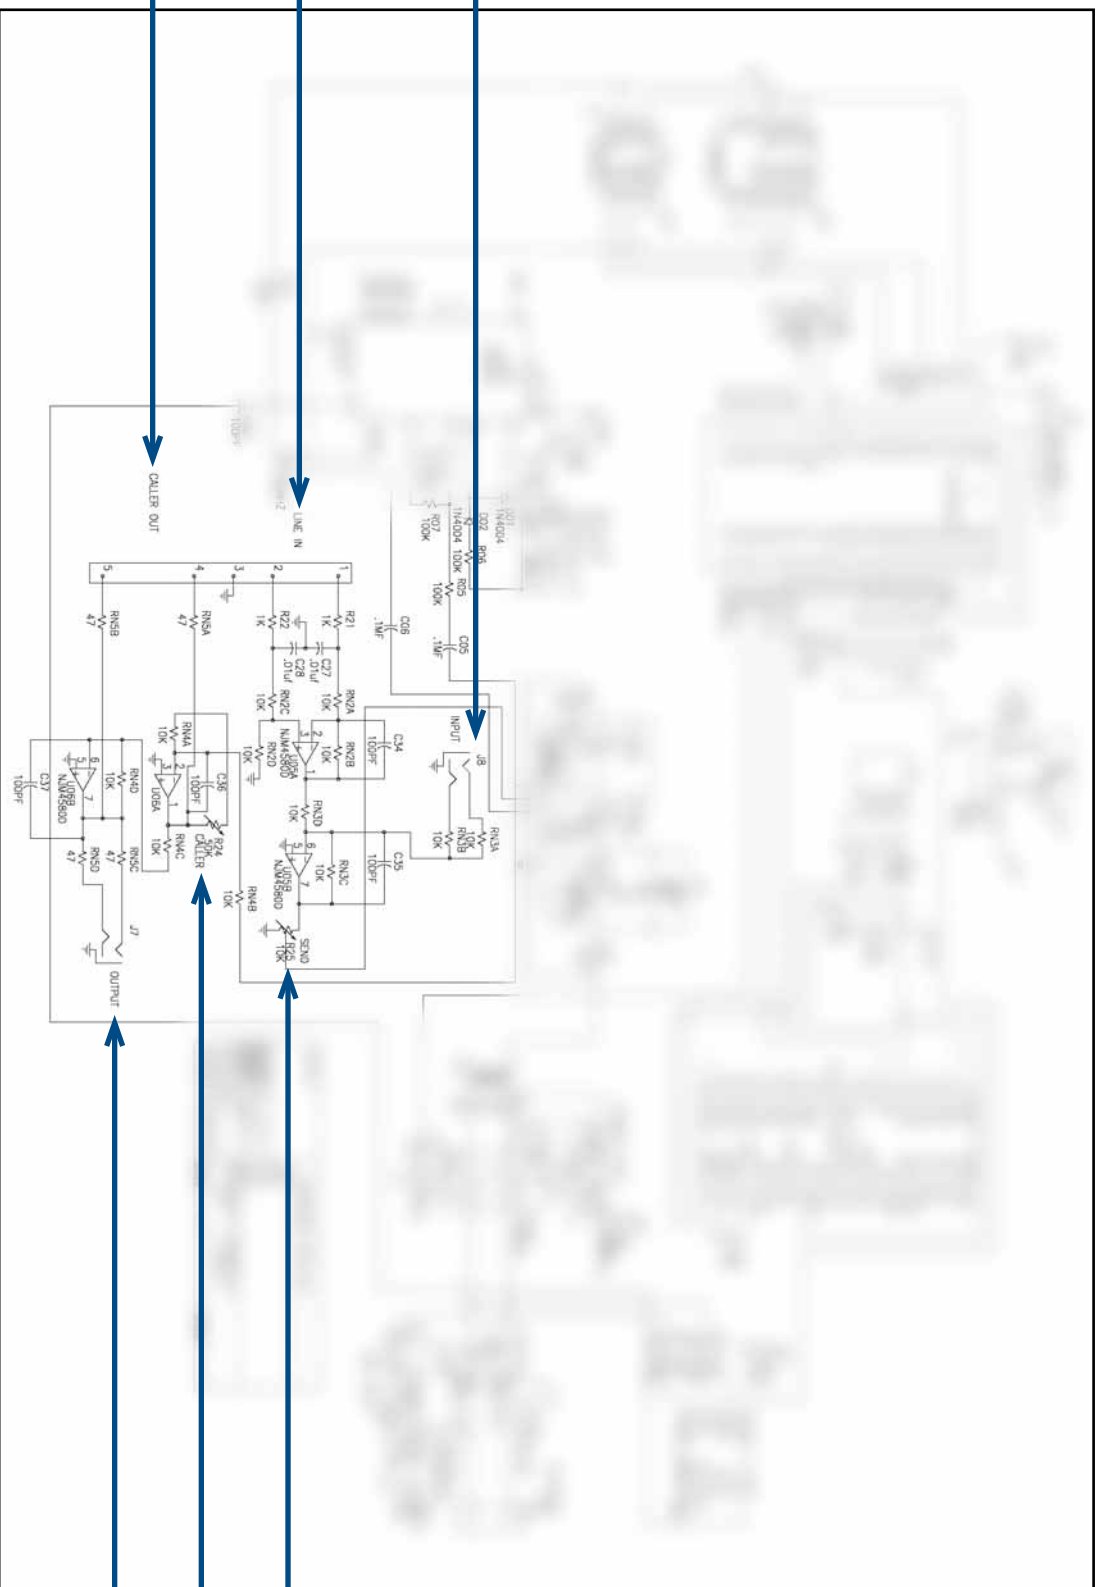

Front Panel Telco  
Send Audio Trimmer

Front Panel Caller  
Audio Trimmer

Unbalanced  
Consumer Level  
Stereo Telco Caller  
Audio Output